

OUTSIDE VIEW



LEFT HINGED DOOR

How to replace CAMEC door locks

CAMEC SECURITY DOOR LOCK KIT

Make sure the parts kit supplied is correct for your hinged door.

Viewed from the outside of the caravan:

If hinge is on the left side of the door - door is **LEFT HINGE**.

If hinge is on the right side of the door - door is **RIGHT HINGE**.


OUTSIDE VIEW



RIGHT HINGED DOOR


Parts Left Hinge Door Lock Kit

Strike
014383

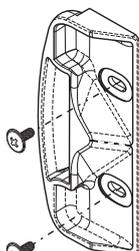


016752
(M4 screws)

Remote Latch Assembly
014386 - Left Hand

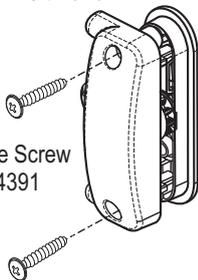

Plastite Screw
014391


Strike
014383

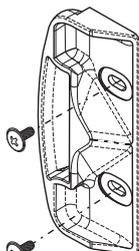

016752
(M4 screws)


Plastite Screw
014391

MAIN LOCK
014384 - Left Hand

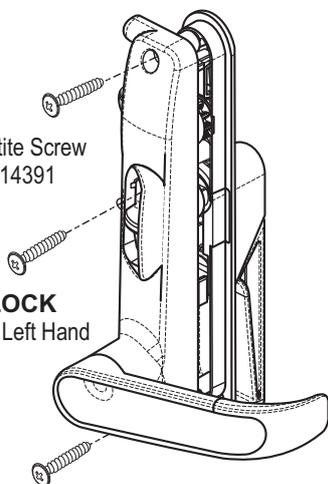


Parts Right Hinge Door Lock Kit

Strike
014383

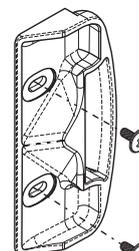


016752
(M4 screws)

Remote Latch Assembly
014387 - Right Hand

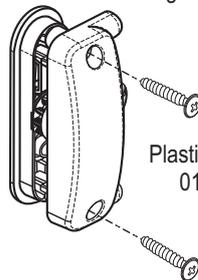

Plastite Screw
014391


Strike
014383

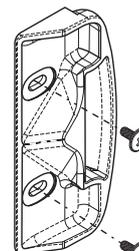


016752
(M4 screws)

Plastite Screw
014391

MAIN LOCK
014385 - Right Hand

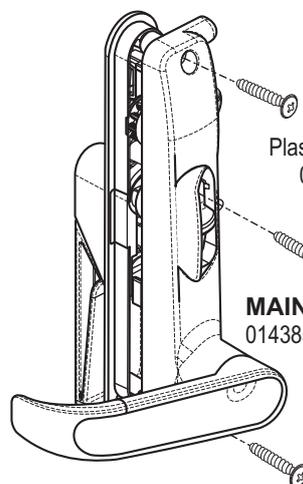


Strike
014383

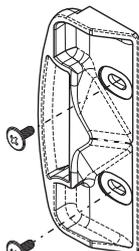

016752
(M4 screws)

Remote Latch Assembly
014386 - Left Hand

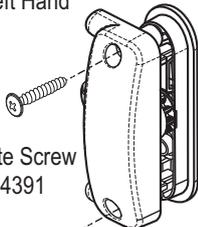


Plastite Screw
014391

A/BRE1/RX Barrel Assy & Keys
014392



Remote Latch Assembly
014387 - Right Hand

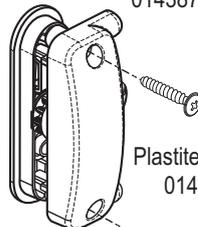


Plastite Screw
014391

A/BRE1/RX Barrel Assy & Keys
014392



Strike
014383

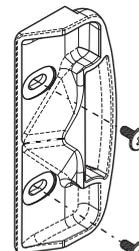

016752
(M4 screws)

SECURITY DOOR

Take Care! **Do not remove the lock and remote latches at the same time.** Make sure at least one lock or latch is installed on the door at any time. Otherwise the aluminium rack in the security door will fall down making the alignment of the rack/latch gear more difficult.

Procedure to replace Lock.

1. Open the door and lift up Handle to separate Security door from the Main door.
2. Press Safety detent and slide locking snib down to expose the retaining screw. (refer to illustration A)

3. Undo retaining screws and remove main lock.
4. Install new inner main lock with locking snib down.

Use screwdriver to lift drive block and make sure latch gear engages with the rack. (refer to illustration B)

5. Fit the key barrel in the outer main lock. Position the detent ball at the side of the lock, install Outer Main Lock on door. Hand tighten screws. Do not overtighten. Put locking snib into normal position and test handle for correct operation. (refer to illustration C)

Procedure to replace Remote Latches.

1. Unscrew remote latches and remove remote latch. Install new remote latches in reverse order to removal and hand tighten screws. Do not overtighten. (refer to illustration D)
2. Test operation of the door.

