


CAMEC SECURITY DOOR LOCK KIT


Parts Left Hinge Door Lock Kit

Strike
014383


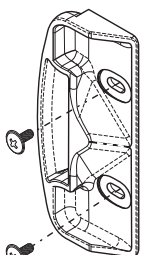


016752
(M4 screws)

Remote Latch Assembly
014386 - Left Hand

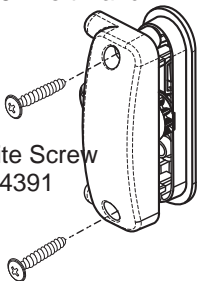


Plastite Screw
014391

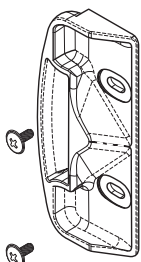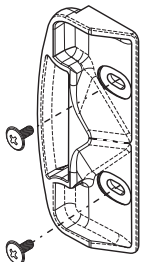

A/BRE1/R Barrel Assy & Keys
014392

Parts Right Hinge Door Lock Kit

Remote Latch Assembly
014387 - Right Hand

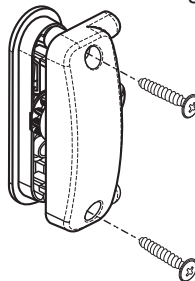

MAIN LOCK
014385 - Right Hand

SECURITY DOOR

Take Care! Do not remove the lock and remote latches at the same time. Make sure at least one lock or latch is installed on the door at any time. Otherwise the aluminium rack in the security door will fall down making the alignment of the rack/latch gear more difficult.

Procedure to replace Lock.

1. Open the door and lift up Handle to separate Security door from the Main door.
2. Press Safety detent and slide locking snib down to expose the retaining screw. (refer to illustration A)

3. Undo retaining screws and remove main lock.
4. Install new inner main lock with locking snib down.

Use screwdriver to lift drive block and make sure latch gear engages with the rack. (refer to illustration B)

5. Fit the key barrel in the outer main lock. Position the detent ball at the side of the lock, install Outer Main Lock on door. Hand tighten screws. Do not overtighten. Put locking snib into normal position and test handle for correct operation. (refer to illustration C)

Procedure to replace Remote Latches

1. Unscrew remote latches and remove remote latch. Install new remote latches in reverse order to removal and hand tighten screws. Do not overtighten. (refer to illustration D)
2. Test operation of the door.

