

### **Low Battery warning**

LED strobe light will flash every 10 seconds when the batteries need to be replaced

### **Tamper proof**

If the receiver is removed from bracket while the system is armed, the siren will sound.

# **Sphere**

**Wireless Security System**

**Part Number 400-03520**

## Introduction

Sphere 400-03520 Wireless Security System is a wireless receiver with build-in siren & LED strobe light.


The Sphere 400-03520, Wireless Security System can learn up to 2 Remotes 400- 03554 and up to 5 accessory devices, such as:

Wireless door sensor 400-03550

Wireless motion sensor 400-03552

## Product Specification

\*\*\* For indoor use only \*\*\*

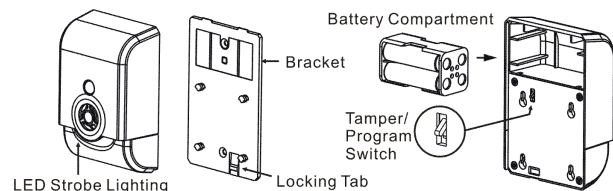

### Specification:

Frequency Range: 433.92Mhz

Operating Range: Up to 100 feet line of sight

Loud Audible Alarm: > 105Db@1meter

Strobe Light: 4 X LED lights

Operating Temp.: -15°C~ 60°C (5°F~140°F)

Battery: 4pcs x AA Energizer Batteries

## Installation

1. Remove the bracket from the siren by pressing the locking tab, and gently slide up the receiver housing.
2. Use screws or adhesive tape to fix the bracket on the required location.
3. Once the bracket is secured slide the siren back into the bracket.

## Programming

**Note:** If the Tamper/Program switch is held down while the receiver is being powered up with the 4pcs x AA Energizer batteries, the memory will be erased and all accessory devices previously programmed will be erased from the memory.

When fitting a new system for the first time, skip the following steps as the system has already been factory programmed, the two transmitters, the wireless motion sensor and the wireless door sensor are already programmed. The following steps need to be followed only when adding extra accessory devices onto the system.

1. Press and hold down the Tamper/Program switch and power up by inserting the 4pcs x AA Energizer batteries into the Wireless Receiver.
2. Immediately after the receiver is powered up, the LED strobe light will flash three times and the GREEN LED will stay lit to confirm that the unit is in learning mode (all previously programmed accessory devices are now erased from the memory) after the third flash release the Tamper/Program switch.
3. Trigger (one at a time) all the accessory devices and remotes to be programmed, the LED strobe light will flash once every time an accessory product is programmed in to the wireless receiver.
4. Once all accessory devices are programmed into the receiver exit learning mode by pressing and releasing the Tamper/Program switch. The LED Strobe light will flash two times and the green LED will turn "Off" to confirm that the system has exit learning mode
5. Mount the Wireless Receiver onto the bracket, the system is ready for use.

## Operation

1. Press the Arm button on the transmitter, the siren will emit one arm chirp and the LED strobe will flash once to indicate that the system is armed.
2. Press the Disarm button on the transmitter, the siren will emit three disarm chirps and the LED strobe light will flash three times to indicate that the system is disarmed.
3. When triggered the siren will sound for 30 seconds, the LED strobe light will continue to flash until the system is disarmed with the remotes.