


ASSEMBLING THE ANTI-FLAP KIT FOR INSTALLATION

1

Unpack the anti-flap kit from the carton. Select the two sections with hook ends. These sections have the joiner pieces fitted inside for transport and packing purposes. Remove the two set screws, slide the joiner piece out, reverse the direction and re-fix in place using the original set screws.

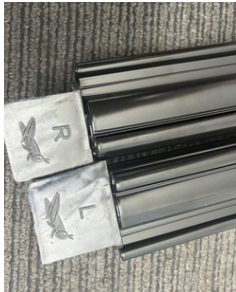

Remove the hooks from the bars and replace them with the paddles.

2



3

Insert the plastic spigot ends into the 600ml extensions.

Joining the hook end and the 600ml extensions to the centre piece. You will have 2 pieces of the anti-flap kit left over. This is correct and can be kept as spares if needed in the future.

4



INSTALLING THE ANTI FLAP KIT


1

Wind out the awning as per operating instructions for your model of awning. The awning should be supported using drop down legs if applicable or by using tie down ropes (follow operating instructions for your model of awning)



2

Lay the AFKPRO+ on either side of the opened awning, in position ready for install. Slide the paddle fitting over the shock absorber

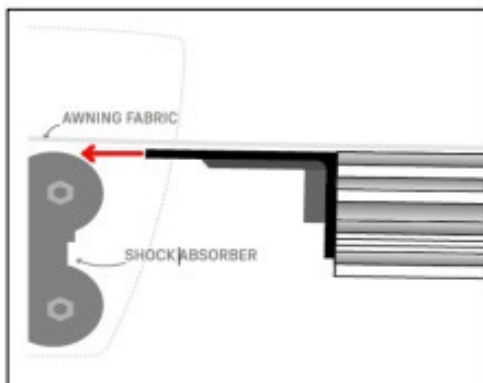

3

Loosen the knobs on the centre piece of the AFK+ and extend it to fit the width of the awning. Open the 5 handles to allow the awning vinyl to be clamped inside the AFK

4

Fit the AFK to the awning by pushing the black spigot on the AFK onto the triangular bracket on the awning legs.

5

Once the bar is in place, tighten the cam handles to secure the awning material.

