


Instructions on how to convert your Premium Roll-out anti-flap kit to fit your Fiamma F45S awning

Step 1

Fitting the AFK Mounting Bracket



Fit the AFK mounting bracket inside the canister. The outer edge of the mounting bracket should be in line with the fabric edge. Generally, the best position to fix the mounting bracket is 20mm below the fabric. However, in some cases, there will be tracks or other interferences in which case the closest fit (to 20mm) obtainable should be used.

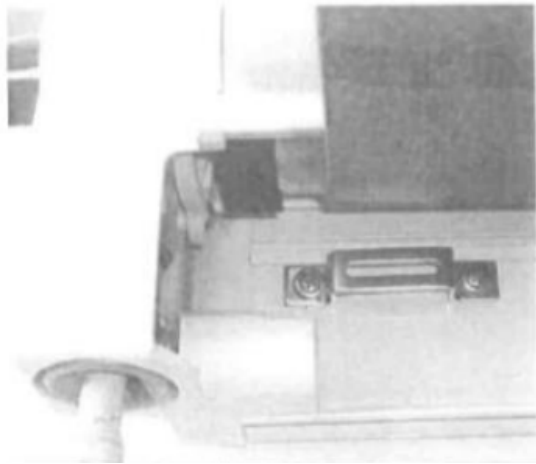

Step 2

Fitting the Extension Adaptor

Remove the extension hook end from the regular AFK and fit the extension arm in its place making sure the extension arm extends 10cm from the end of the AFK

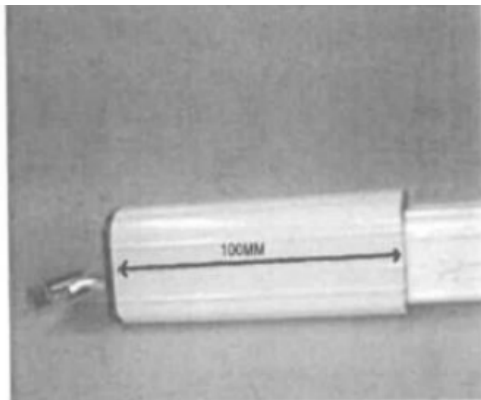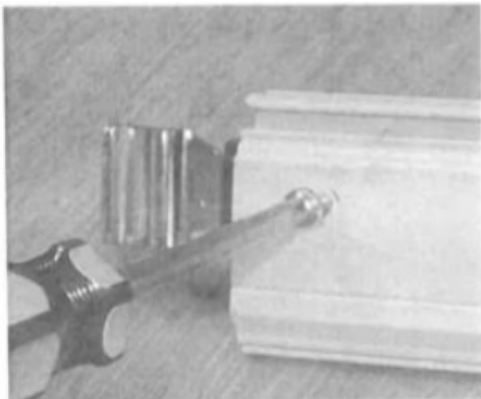


Step 3

Take out the Spigots from the AFK and replace with the black plastic molded Spigots supplied. These are designed to fit over the leg joint fittings (grey plastic ridge section) and so no brackets are required to be installed on the Outrigger.




Attaching the kit to your awning

Once the kit is assembled. Insert the hook end into the bracket on the van.

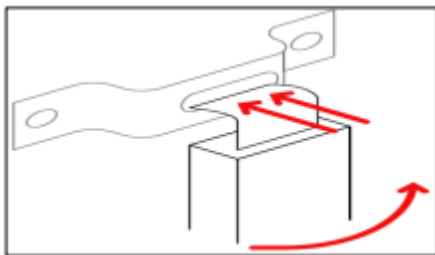

Loosen the knobs on the center piece of the AFK and extend it to fit the width of the awning.

Raise the AFK to horizontal and place the black bracket onto the leg bracket on the awning.

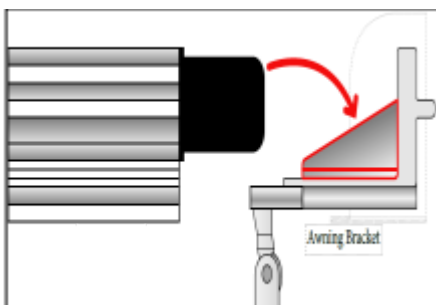

Open the 6 handles to allow the awning vinyl to be clamped inside the AFK.

Pull the two ends of the AFK apart to ensure it fits snugly between the van and the awning. Tighten the two knobs and then clamp the awning material inside the AFK and close the clamps.